

TIME MACHINE

PowerGistics

OWNERS MANUAL

REV A



We welcome any questions about technical support or warranty claims at <https://powergistics.com/support/>

Have a question about your PowerGistics products?



 


Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void its warranty.

- **DO NOT PLUG POWERGISTICS TOWERS INTO OTHER TOWERS. MUST BE PLUGGED DIRECTLY INTO THE WALL OUTLET.**



In its unassembled state, small parts present a hazard.



Must be assembled by an adult.



Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.



Do not install or use the electrical components of this unit during a lightning storm.



This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.



 
Read your power strip's electrical specifications. Only plug in to devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible. Do not connect to another power strip or use an extension cord. Unplug when not in use.




Read the electrical specifications of any electronic equipment you are using with your PowerGistics products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.

TIME MACHINE

The power banks:

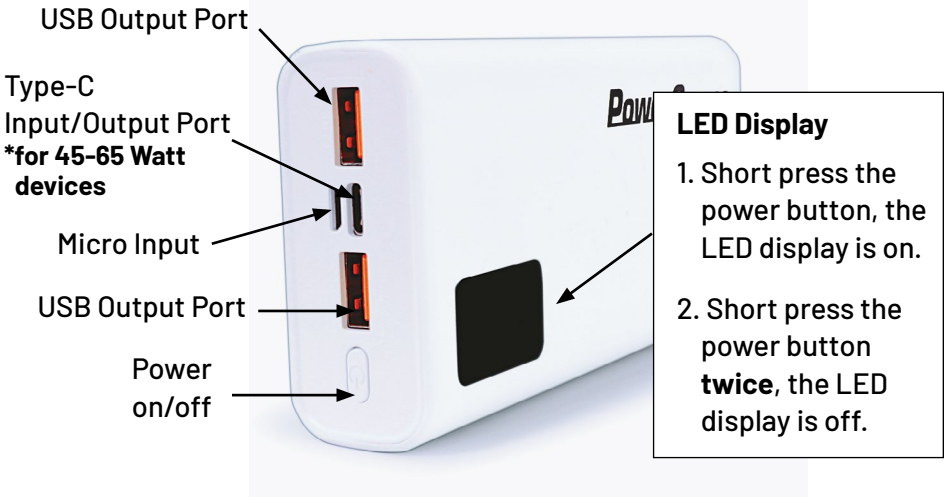

PLEASE READ - Important Notes

- **BEFORE YOUR FIRST USE:** charge the power bank fully to 100% .
- **If power banks are not supplying a charge:**
 - If device is not charging **after it is connected, make sure power button is pushed and green lightning bolt is showing** on the display. 
 - If power bank goes unused for an extended time, it may display a false % of power available. Hold down the power button for 10 seconds to perform a hard reset. Then charge fully before use.
- Use the type-C port to charge Chromebooks, iPads and tablets. **May not charge LAPTOPS while in use.**

Other Notes:

1. Do not place the power bank near flame and/or fire due to risk of explosion.
2. Do not drop the power bank, knock it hard, disassemble it or take it apart. Do not attempt to repair it.
3. Do not put the power bank in direct sun light or in any hot enclosed areas.
4. Do not expose the power bank to corrosive and flammable liquids.
5. Power bank cannot be used temporarily at extreme high or low temperatures.

TIME MACHINE

Includes:

**4 65 Watt, 20,000mAh
super fast power banks:**

- 2 USB output port
- 1 micro input port
- 1 PD20W quick charging USB-C input/output port

**4 orange USB-C to USB-C
cords to connect power
banks to devices**

**8 PowerGistics Slide Stop
Bands**

**4 USB-A to USB-C cables,
already installed, to
charge power banks**

**2 USB-A to USB-C cords to
cable up bottom shelves
to connect to devices**

**1 USB-A 3-in-1 cord that
splits into Lightning,
Micro and USB-C**

1 Power cord

2 Top panel keys

2 Front door keys



x4



x4



x8



 
x6



TIME MACHINE

Unboxing:


1. Set aside top panel.
2. Remove packaging.

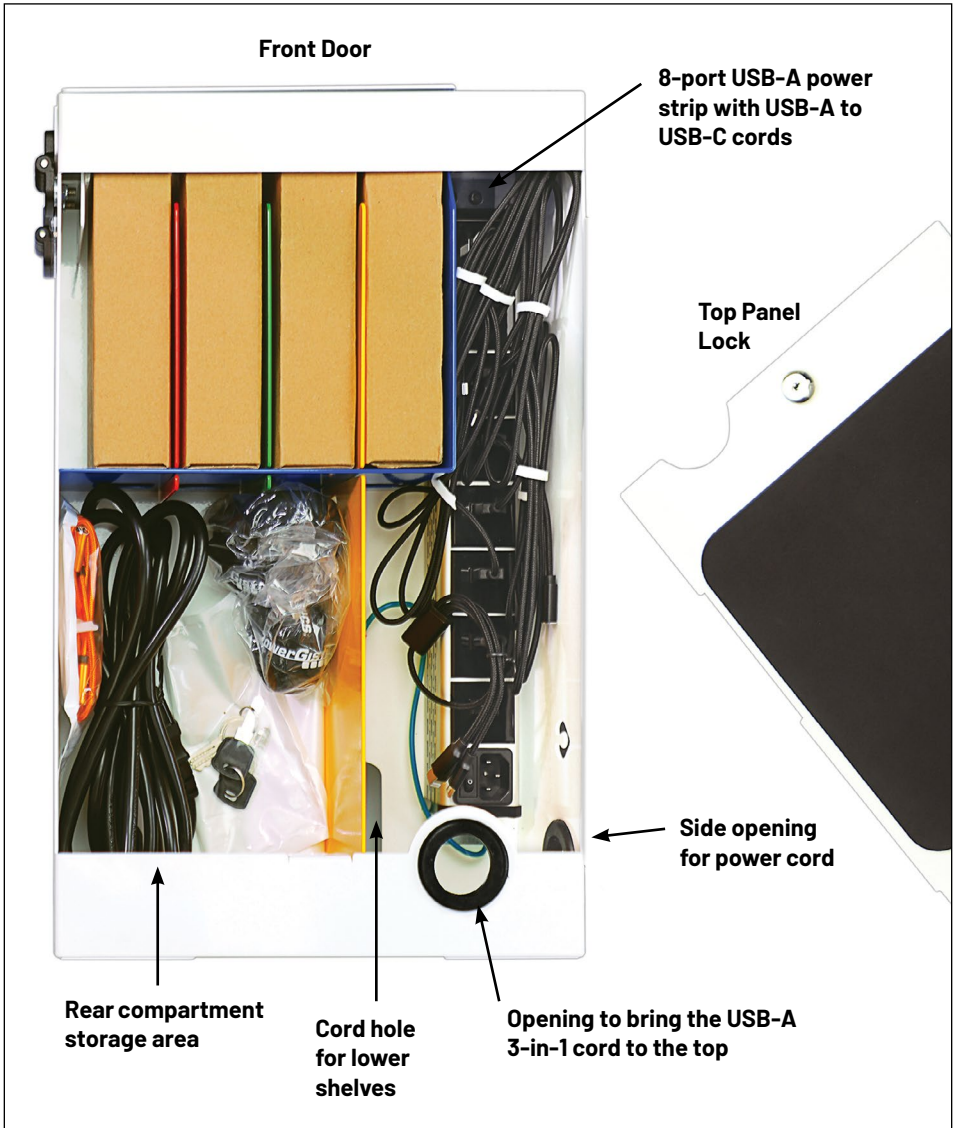

TIME MACHINE

Power Bank Setup:

 1. Plug in the orange USB-C charging cable to the power bank port.
2. Install Slide Stop Bands on both ends of the power bank, going over the orange power cord.

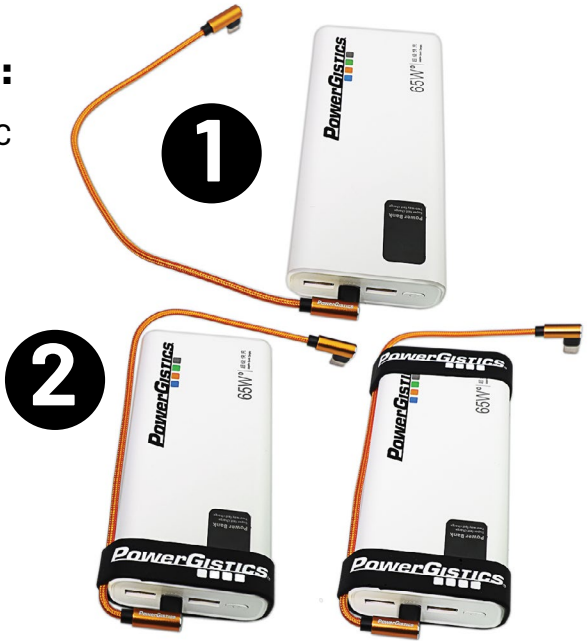

Setting up power strip:



1. Insert power cord into grounded wall socket.



2. Feed power cord through side opening.



3. Plug into the power strip and turn on.

 
TIME MACHINE

Connecting Power Bank for Charging and Recharging:



1. Run USB-A to USB-C cord from power strip to power bank shelf using the rear access hole.

2. Secure cord to pinch point (#2).

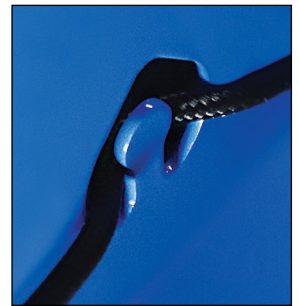

3. Secure cord to pinch point (#3) leaving enough cord to plug into power bank.



TIME MACHINE



4. Place the prepared power bank into the compartment.



5. Plug black USB-A to USB-C cord into the C port of the power bank to charge.

TIME MACHINE

 
Installation of USB-A 3-in-1 Cord:

Feed USB-A 3-in-1 Cord through top opening (#1).

Connecting USB Cords to Lower Shelves:


Run supplied USB-A to USB-C cord (or other unsupplied cord) from power strip through hole to lower shelf (#2).

Secure cord to pinch points (#3, #4 and #5).

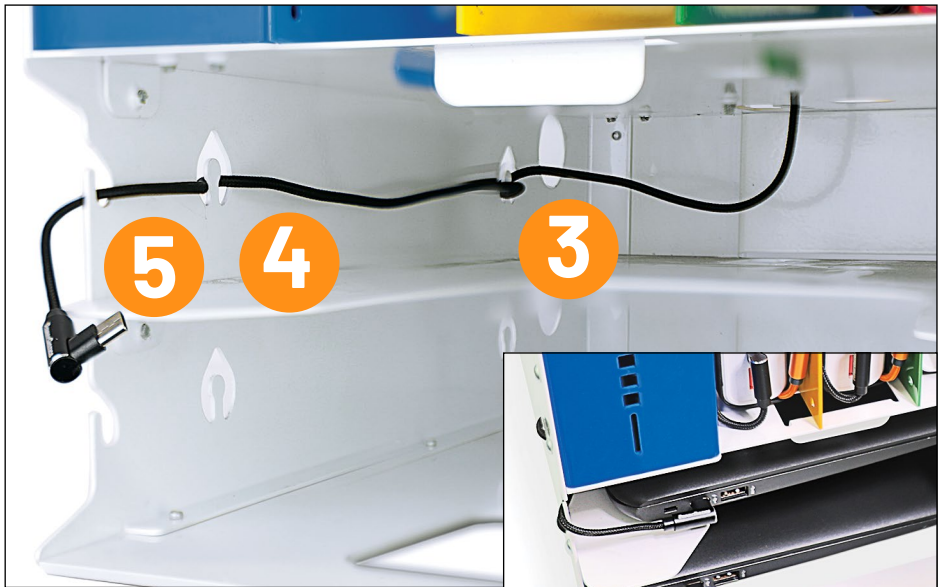

Allow just enough cord length to plug in a device.

 Return the top panel to the top of the unit.

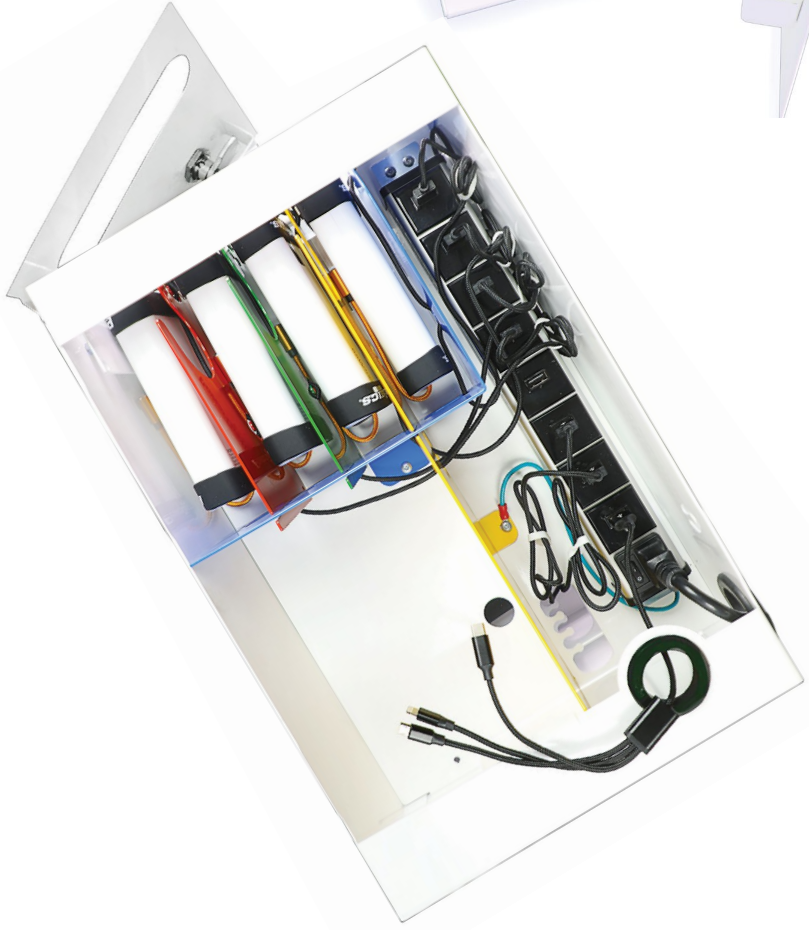

TIME MACHINE

Charging Device from Power Bank:

1. Plug orange USB-C power cord into the USB-C port on device.
2. Push power button on power bank to activate charging port. You will see a green lightning bolt.



3. When finished using power bank, unplug both ends of orange USB-C cord and return to Time Machine.
4. Plug black USB-A to USB-C cord into power bank to recharge.





100 Continental Drive, Columbus, Wisconsin 53925 USA
201-389-9940 | www.PowerGistics.com