


STAND TOWER RETRO MOUNT INSTALLATION GUIDE

Model # 1T1216TRM0 for Tower12 or Tower16 pre-2017

Model # 1T1820TRM0 for Tower18 or Tower20 pre-2017

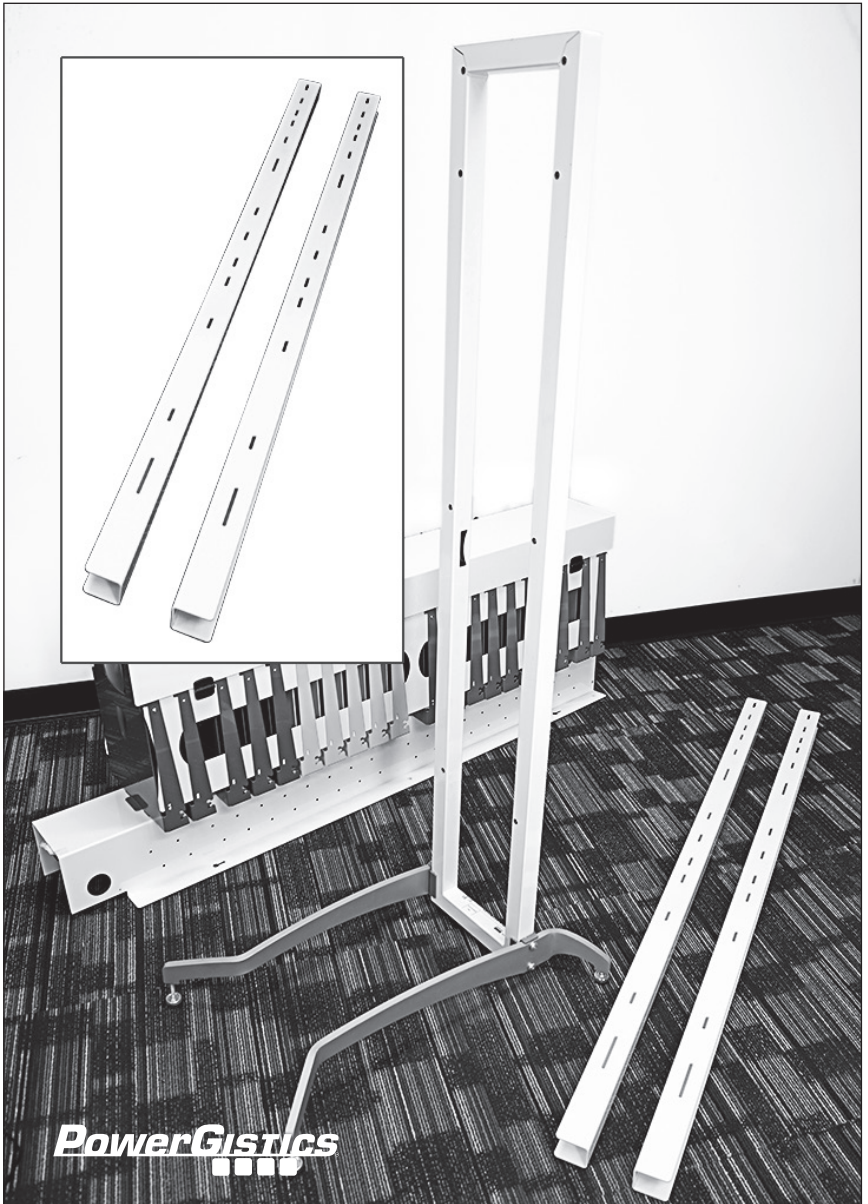

WARNINGS



WARNINGS

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void its warranty.

- **DO NOT PLUG POWERGISTICS TOWERS INTO OTHER TOWERS. MUST BE PLUGGED DIRECTLY INTO THE WALL OUTLET.**
- **WALL MOUNTED TOWER MUST HAVE THE BASE RESTING ON THE FLOOR.**
- **SHELF WEIGHT RATING: 5 LBS PER SHELF.**



In its unassembled state, small parts present a hazard.



Must be assembled by an adult.



Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.



Do not install or use the electrical components of this unit during a lightning storm.



This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.



Read your power strip's electrical specifications. Only plug in to devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible. Do not connect to another power strip or use an extension cord. Unplug when not in use.




Read the electrical specifications of any electronic equipment you are using with your PowerGistics products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.



Adapter Kit includes:

- stand adapter bars
- hex wrench
- nuts
- carriage bolts
- socket head screws

Two separate spine adapters fit between one of the contemporary Just-A-Stands or Stand on any older Tower.

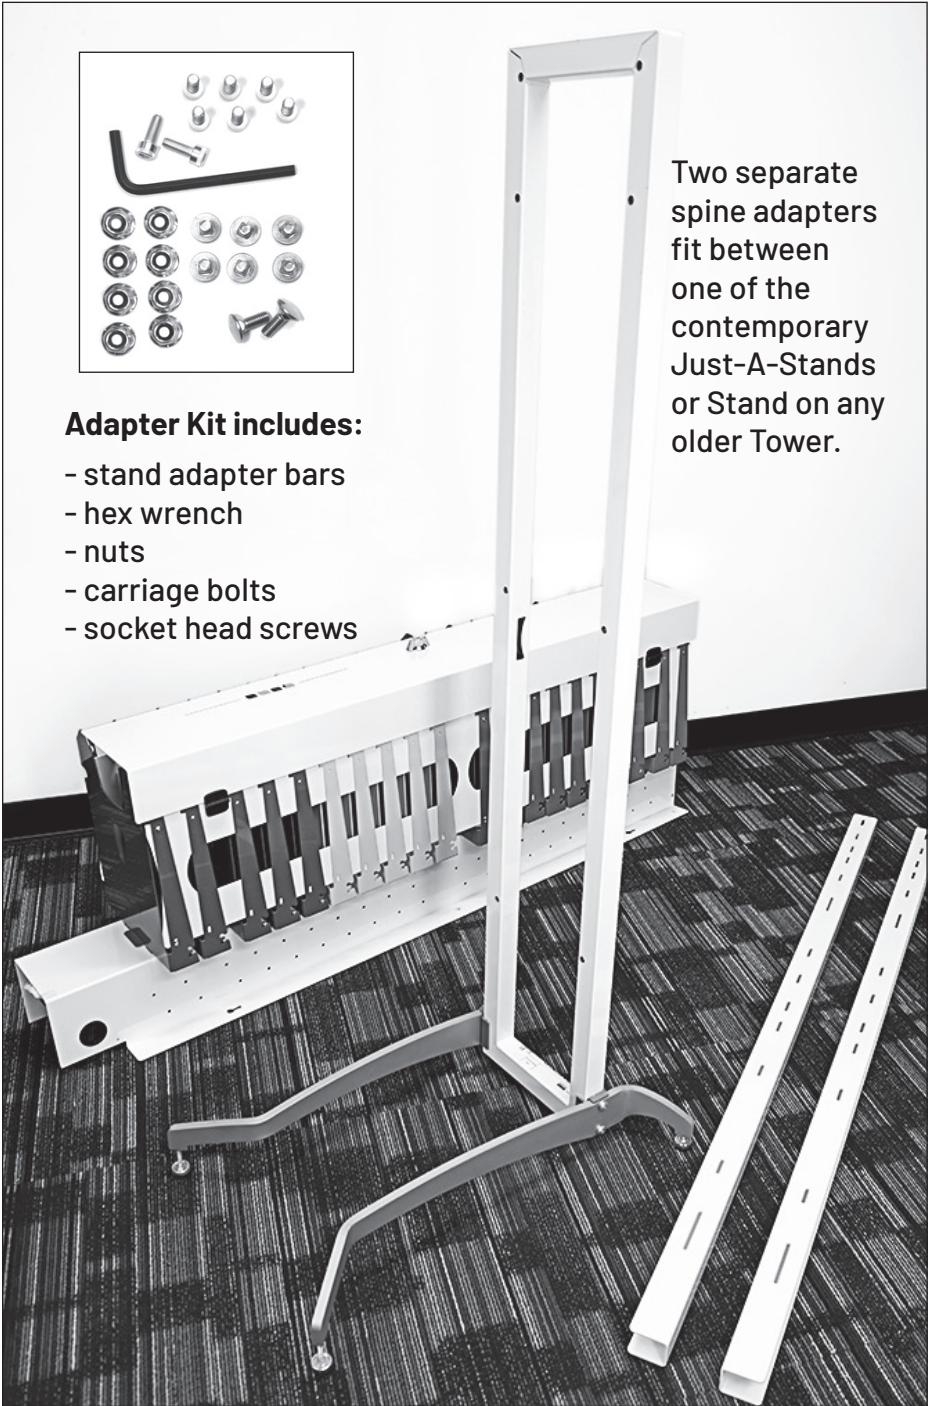




1. Insert hex-head bolts to the Tower spine.



NOTE:
Leave screws sticking out for the adapters to go on.



2. Position the stand adapters to the socket head screws.

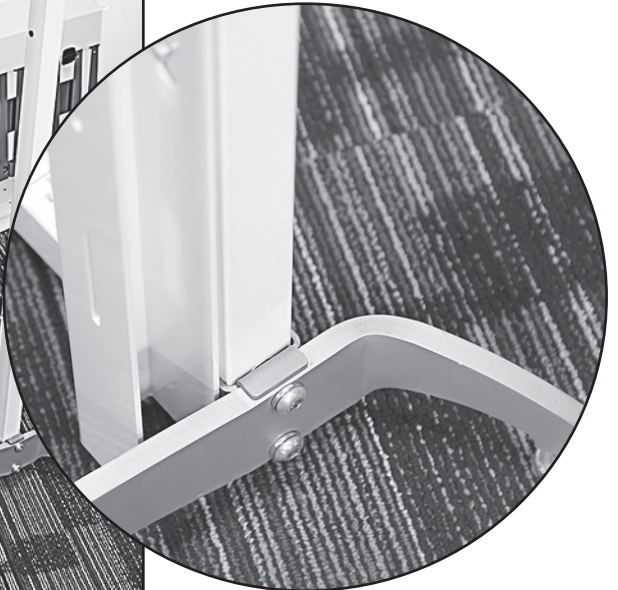

3. Tighten the socket head screws.

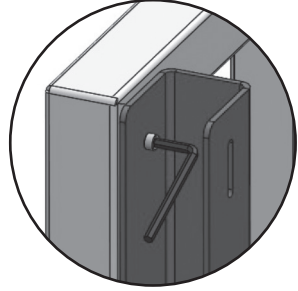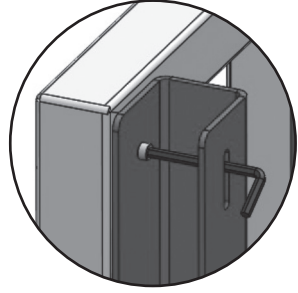


Use either method to tighten socket head screws.





4. Place the Tower on the adapters. Line up the holes in the Tower spine with the hole slot on the adapters.

5. Insert the carriage bolts and tighten with the nuts.

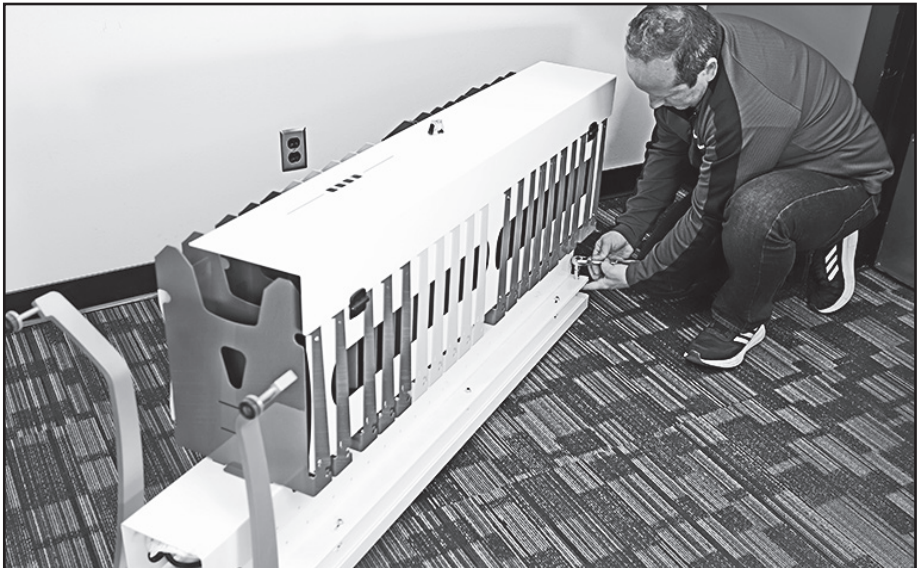





Check out our installation videos at
Vea nuestros videos de instalación en
Se vores installationsvideoer på
Découvrez nos vidéos d'installation sur
<https://powergistics.com/tower-series-install-videos/>



100 Continental Drive, Columbus, Wisconsin 53925 USA
201-389-9940 | www.PowerGistics.com